


Migrating Flight Stand Recorded Tests From v1.7.1 To v1.7.2

Follow this guide if you would like to keep the recorded tests between the two versions. This process will not be necessary in future versions since the data won't be erased anymore.

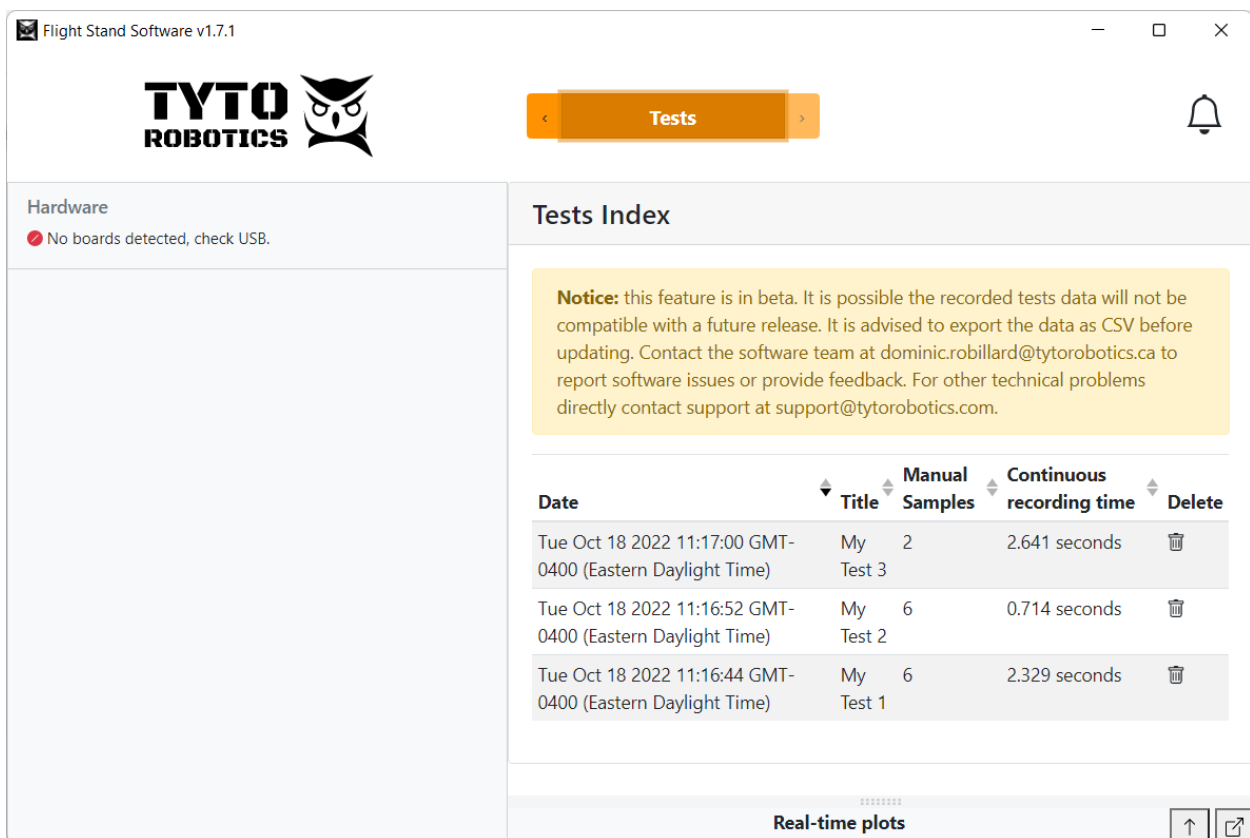

The screenshot shows the 'Flight Stand Software v1.7.1' interface. On the left, there is a 'Hardware' section with a red error icon and the text 'No boards detected, check USB.' The main area is titled 'Tests Index' and contains a yellow notice box with the following text: 'Notice: this feature is in beta. It is possible the recorded tests data will not be compatible with a future release. It is advised to export the data as CSV before updating. Contact the software team at dominic.robillard@tytorobotics.ca to report software issues or provide feedback. For other technical problems directly contact support at support@tytorobotics.com.' Below the notice is a table of recorded tests:


Date	Title	Manual Samples	Continuous recording time	Delete
Tue Oct 18 2022 11:17:00 GMT-0400 (Eastern Daylight Time)	My Test 3	2	2.641 seconds	
Tue Oct 18 2022 11:16:52 GMT-0400 (Eastern Daylight Time)	My Test 2	6	0.714 seconds	
Tue Oct 18 2022 11:16:44 GMT-0400 (Eastern Daylight Time)	My Test 1	6	2.329 seconds	

At the bottom of the interface, there is a 'Real-time plots' section with an upward arrow and a share icon.


Example of recorded tests on version 1.7.1. This guide shows how to keep those tests in version 1.7.2.

Step 1 - backup tests from v1.7.1


- 1) Launch the Flight Stand v1.7.1
- 2) Activate debug mode:

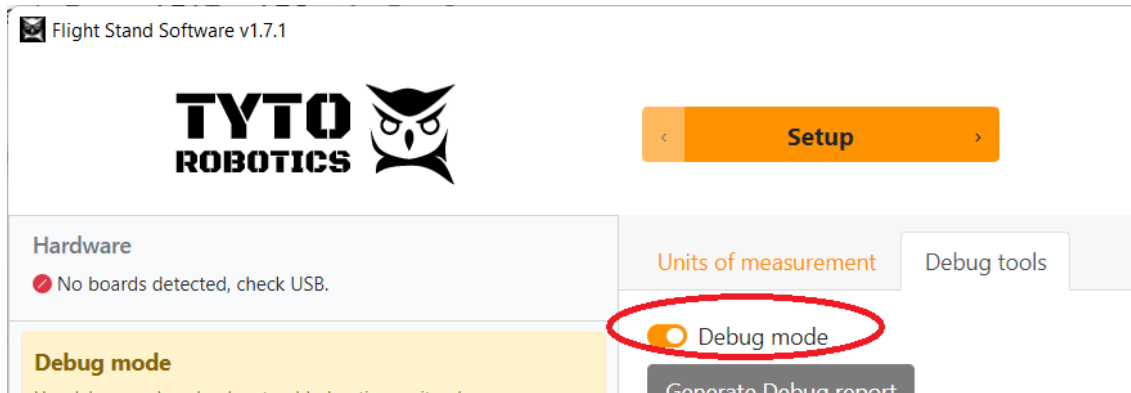


- 3) Confirm you have tests to backup in the tests tab:

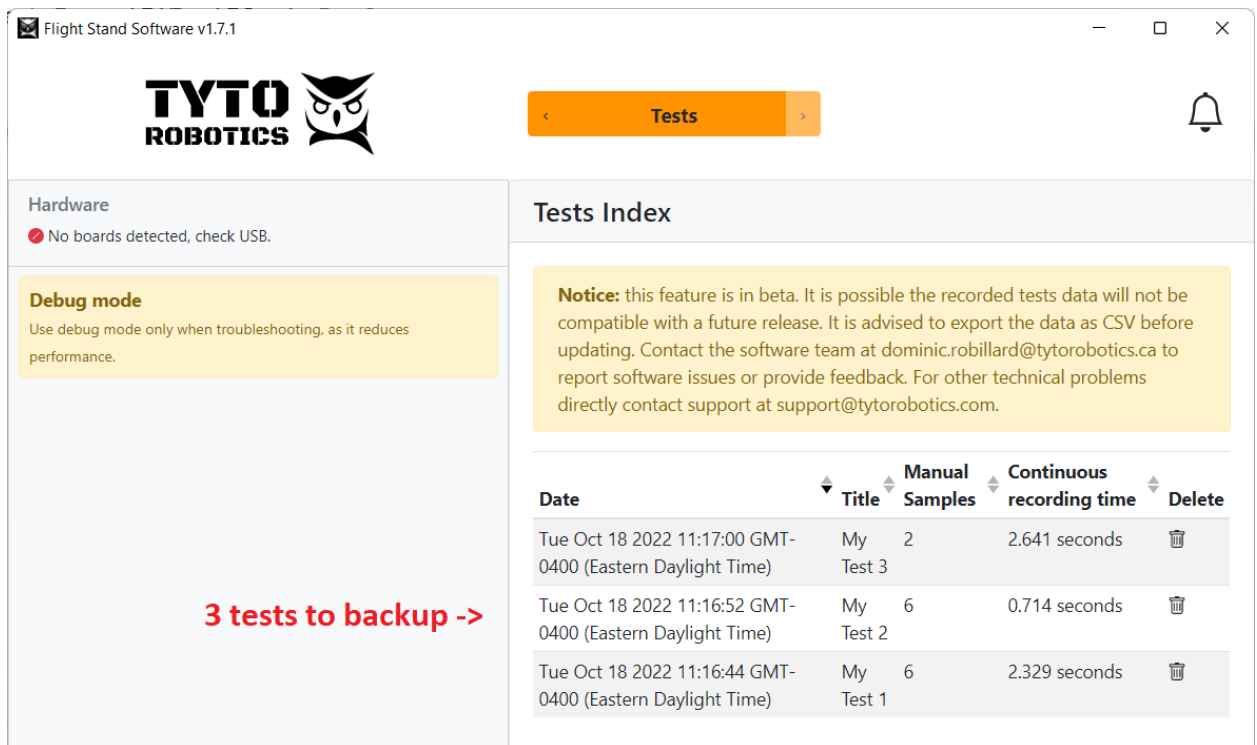


- Click on any test to learn the file path where tests are stored in your PC. You need debug mode activated to see this information:

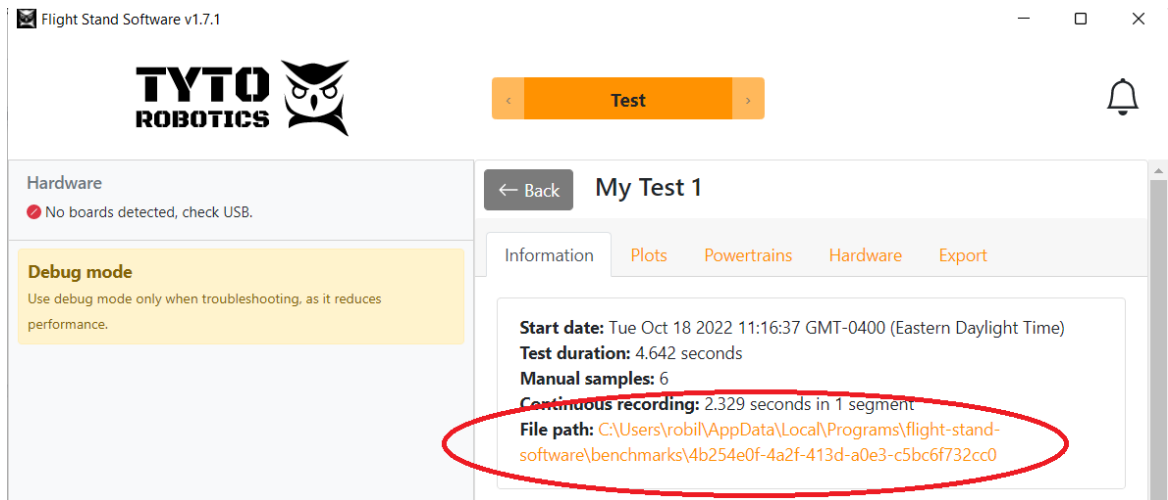


- Open this folder in file explorer, and move up one level to see the contents of the “benchmarks” folder. You should see the folders for each test:

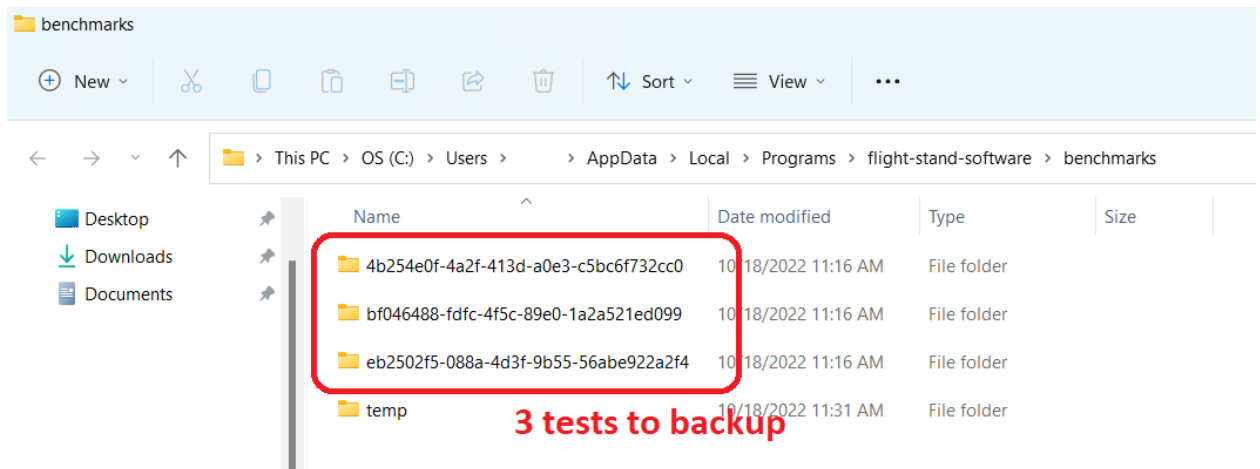


- 6) Close the Flight Stand software
- 7) Move up one more folder, the “benchmark” is the folder you need to move to a temporary location, such as on your “Desktop”:

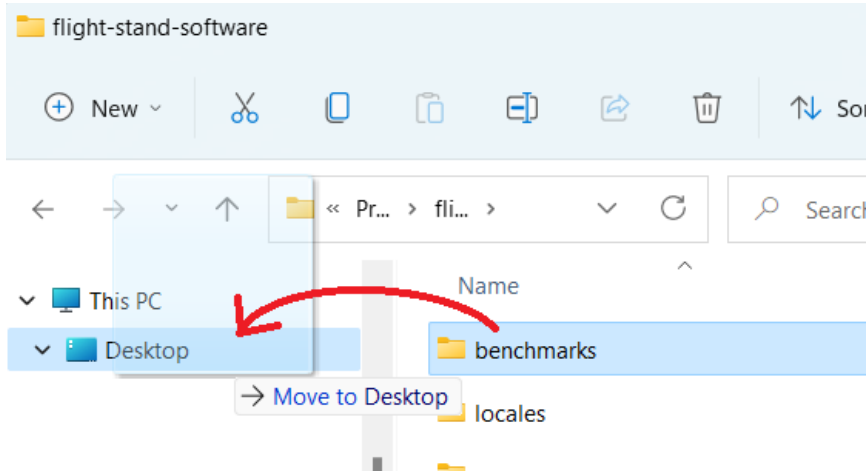


- 8) Install the new software v1.7.2

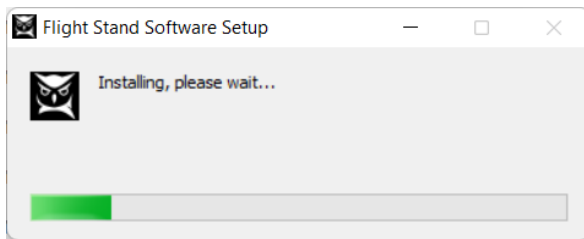


- 9) You will notice the list of tests is empty:

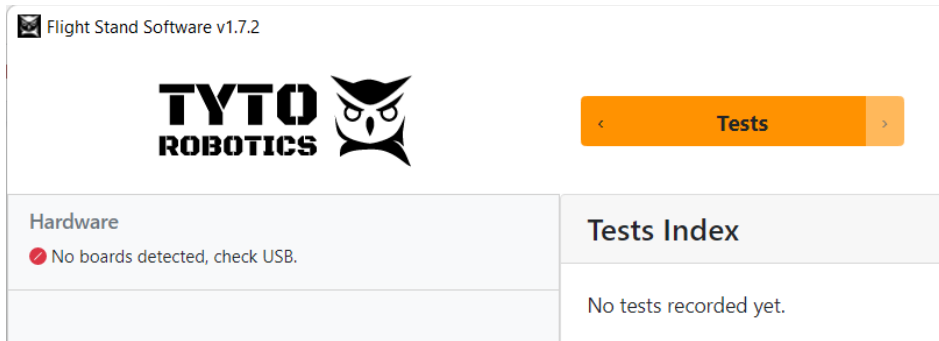

10) Go to Setup->Debug tools, and open the folder under the “GUI user data” section:

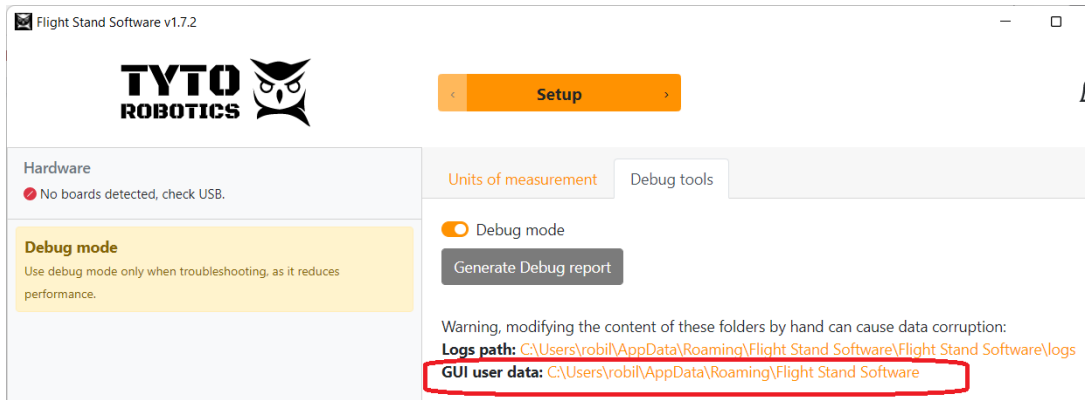

11) Move the “benchmarks” folder back into this “GUI user data” folder:

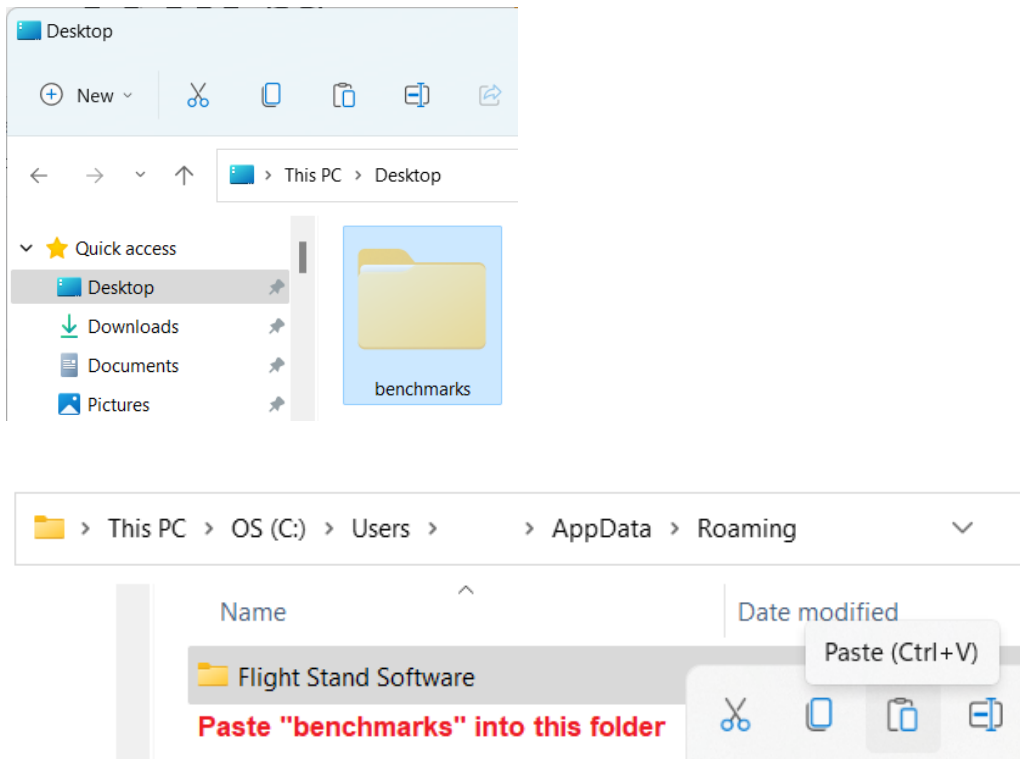

12) If you did everything correctly, when you restart the Flight Stand Software v1.7.2, you should see the tests available within the program:

